




# Spare Parts Kit Bulletin

SPK-4

## Stokes 306 Or Dresser 2507 Replacement Package For VFS Models

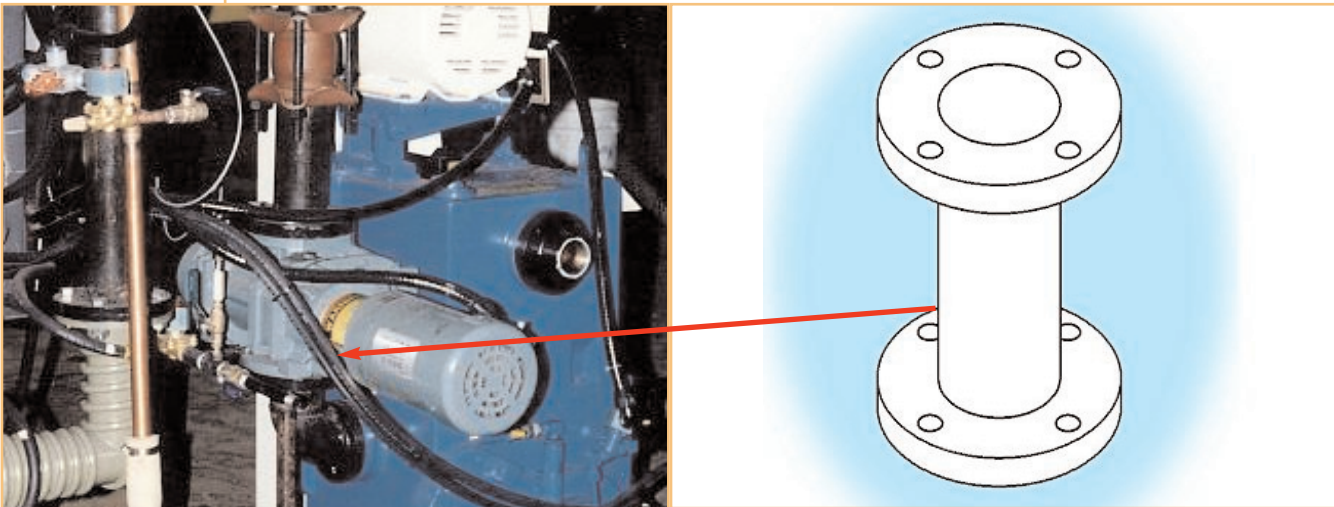

*Pictured at left, the discontinued Stokes 306. On the right is an illustration of the new AC304-00 or AC304-01 Stokes 306 or Dresser 2507 replacement package.*

To minimize your downtime and save you time and money, we have designed the spool piece kits to replace the Stokes 306 or Dresser 2507 in your VFS furnace model.

### **WHEN NEEDED:**

This kit is required due to discontinuation of the pump. These pumps can be found in VFS systems built before 2001.

### **COMPONENTS & PRICE:**

The Stokes 306 or Dresser 2507 Replacement Packages include:

- 1 Custom fabricated spool piece.
- 2 O-rings for flanges.
- 1 O-ring vacuum grease.

**Contact an Ipsen representative for pricing.**

All spool pieces are vacuum leak tested to assure quality.

See back page for installation instructions.

**\*Note:** Exact length is required for order placement.

## **I NSTALLATION:**

1. Unbolt the Stokes 306 or Dresser 2507 and remove.
2. Remove the o-rings from the piping flanges.
3. Install new o-rings with a light coat of vacuum grease, and bolt your spool piece in place.



**Ipsen, Inc. • [www.ipsenusa.com](http://www.ipsenusa.com)**

**Rockford, IL:** PO Box 6266, Rockford, IL 61125-1266 • Ph 815-332-4941 • Fax 815-332-4995

**Souderton, PA:** 1946 E. Cherry Lane, Souderton, PA 18964-1008 Ph 215-723-8125 • Fax 215-721-4488